

# GRANDE FRONTIER DROP DOWN BED LOCKING PROCEDURE


## UNLOCKING THE BED FOR USE



Rotate handle forwards  
(strap must be released)

Release securing strap and rotate locking handle forwards to release locking bars from locking pins

## LOCKING THE BED IN THE UPRIGHT POSITION

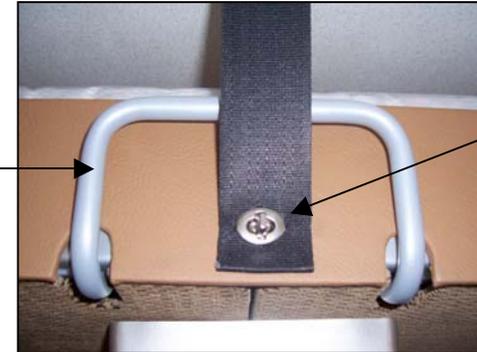

Locking handle

Securing strap

Locking handle must be pushed fully upwards and lay flat against the bed front – then attach securing strap over handle

## VISIBLE CHECK !


Locking bar retracted



When the locking handle is pulled forwards the locking bars retract over the locking pins and the bed can be pulled down for use

## VISIBLE CHECK!

Locking bar

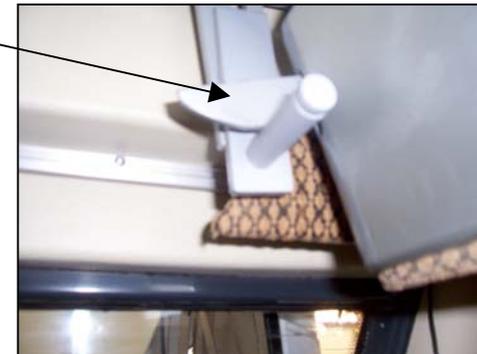

Ensure locking bars are fully latched over the locking pins

**ALWAYS ENSURE THAT BED IS LOCKED IN UPRIGHT POSITION AND SECURING STRAP ENGAGED WHEN DRIVING THE VEHICLE**

**GRANDE FRONTIER DASHBOARD SWITCH FUNCTIONS**  
(LOCATED ON RIGHT HAND SIDE OF STEERING WHEEL)

